


GOOSKY S2 直升机

Futaba 14SG 遥控器参数设置


1. 新建一个模型（所有参数保持初始化，油门反向保持 NORMAL）

Create a new model (remain initialized), all the parameter keep the same as initial, throttle keep normal

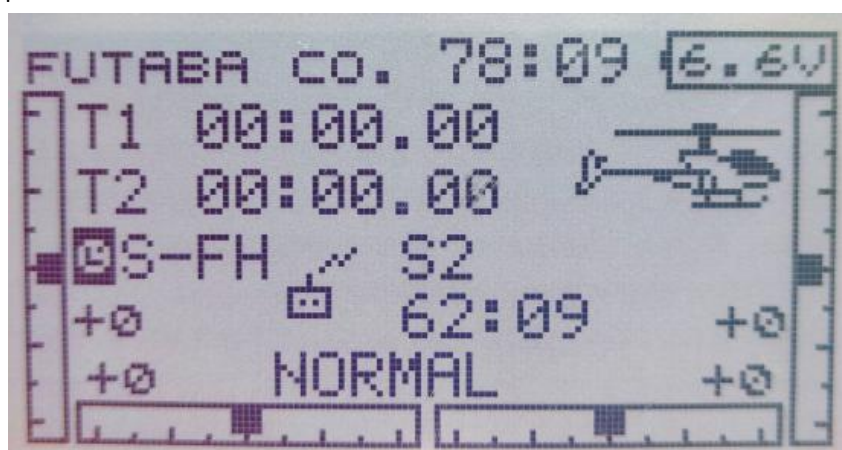


2. 类别设置成直升机

Set the category as helicopter

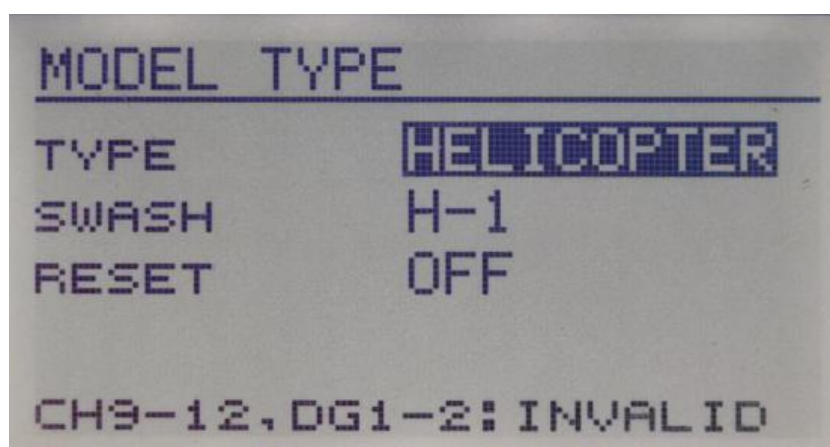

3. 设置油门锁定（HOLD）Set throttle lock（HOLD）



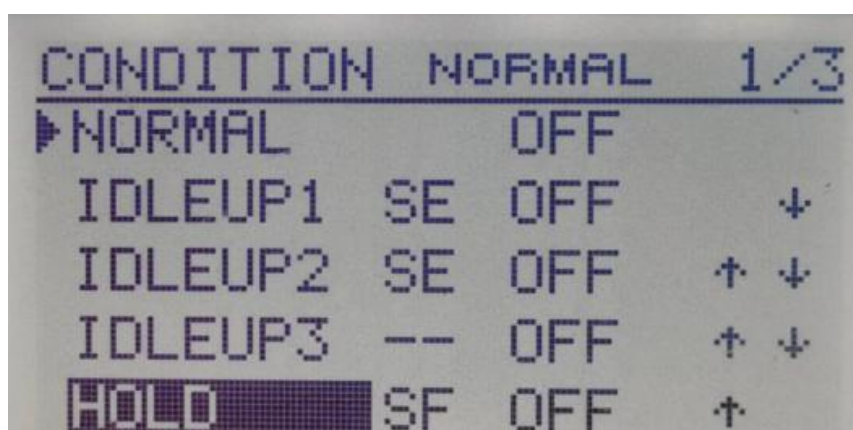


4. 设置 CH5 为起落架模式，设置开关用于控制姿态模式/3D 手动模式切换
Set CH5 as landing gear mode, and set the switch to control attitude mode /
3D manual mode switch




FUNCTION		1/3
CH:5 GEAR		
AILERON	:	GEAR
ELEVATOR	:	PITCH
THROTTLE	:	GOVERNOR
RUDDER	:	GOVERNOR2

FUNCTION	NORMAL		2/4
	CTRL	TRIM	
5 GEAR	SB	--	
6 PIT	J3	--	
7 GOV	--	--	
8 NDL	LS	--	

5. 设置油门曲线 NORMAL、IDLE 1\IDLE 2
Set throttle curve **Normal**、**IDLE 1****IDLE 2**

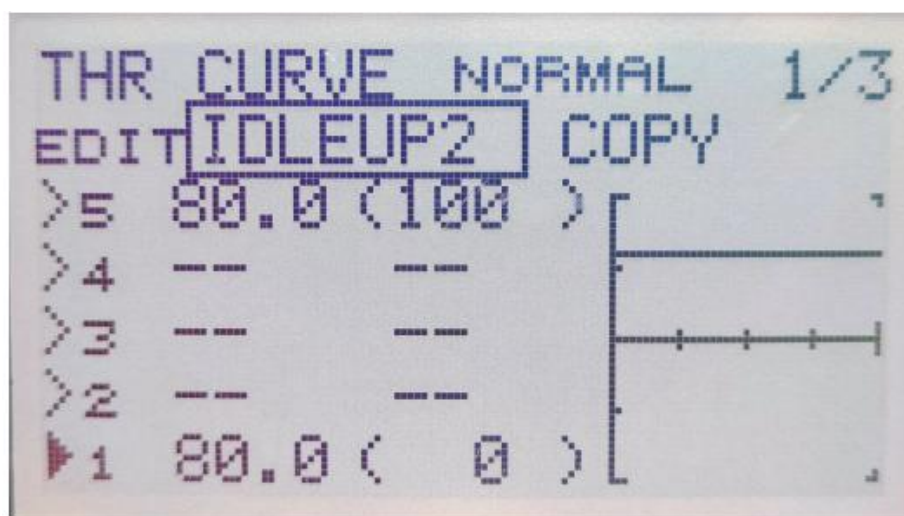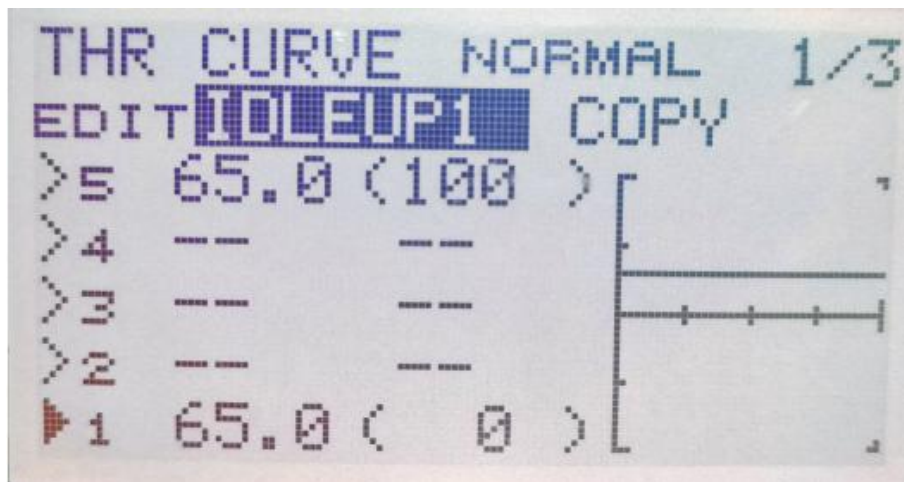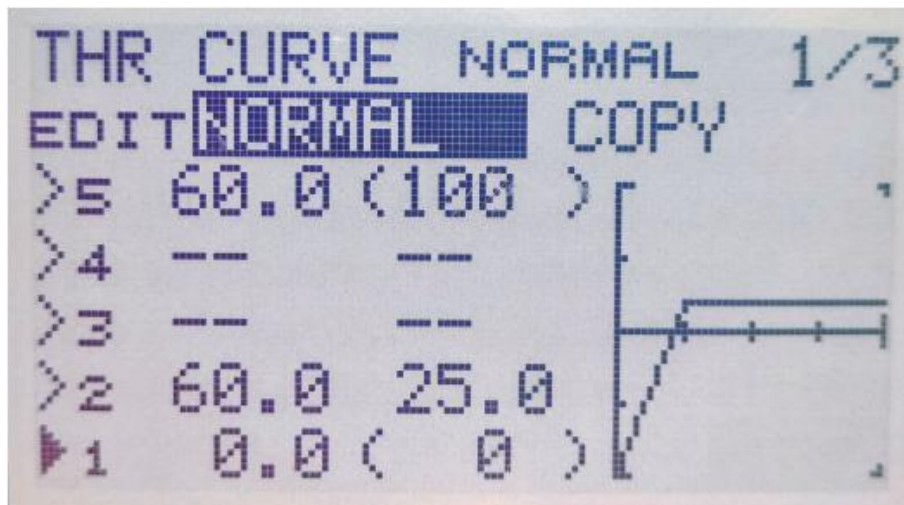

6. 设置螺距曲线 NORMAL、IDLE 1\IDLE 2
Set pitch curve **Normal**、**IDLE 1****IDLE 2**

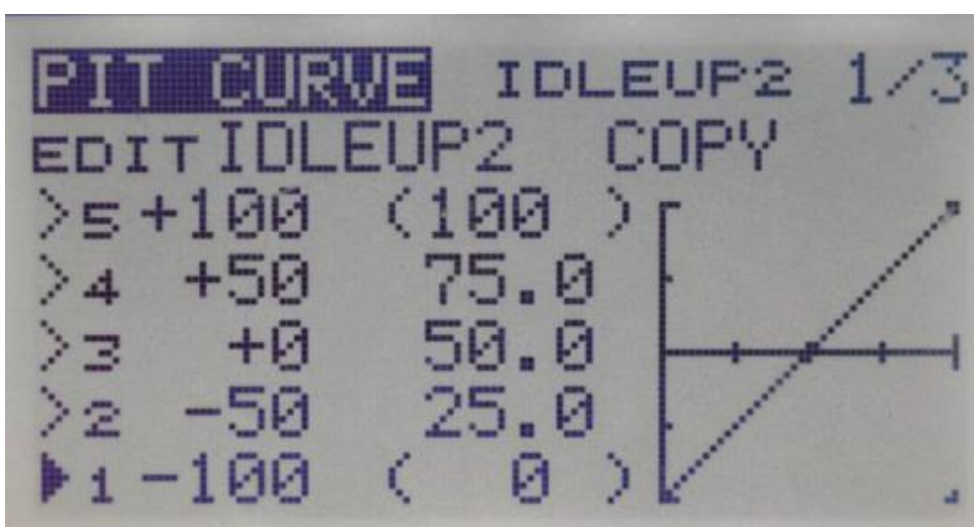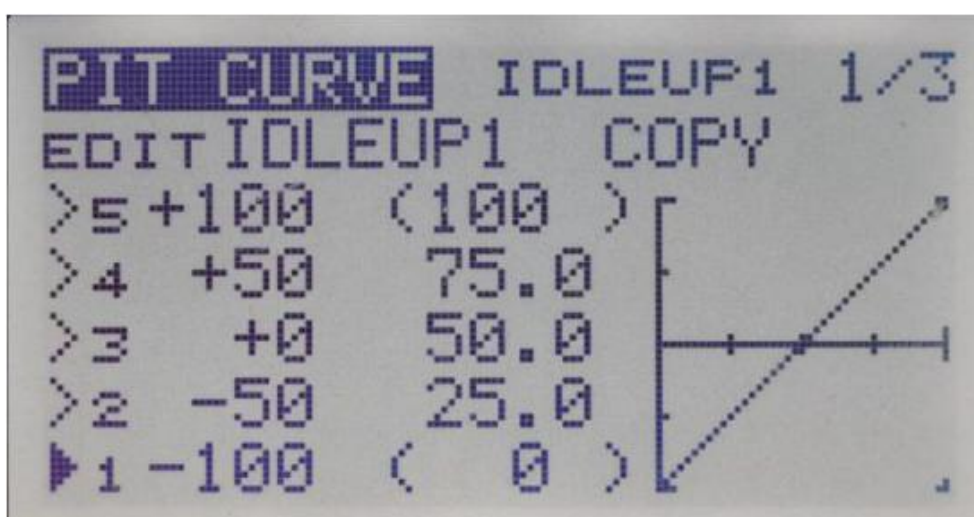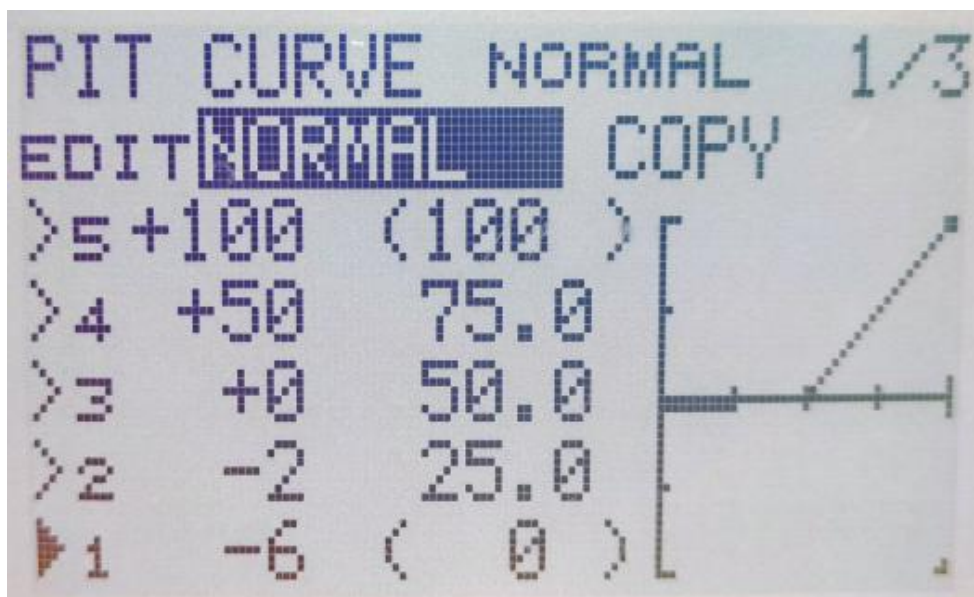

7.遥控器与飞机绑定 The remote control is bound to the aircraft

(1) 打开要遥控器.通上飞机电池, 长按飞控 方对码按钮 3 秒,
等到飞控自检通过, 对码成功。(S-FHSS 协议直接对码)

(1) Turn on the remote controller, connect the aircraft battery, and press and hold the
flight controller code pairing button for 3 seconds.

After the flight control self-check passes, the code pairing is successful. (S-FHSS
protocol is directly paired)

